

Henry Pocket Frames


www.henrypocketframes.com

3

- a) Using one of the two split jambs (green end up, red end down) and stiffeners insert 3 ribs into stiffener channel at screw holes. Align and fasten using one screw, per hole. See detail b.



detail b

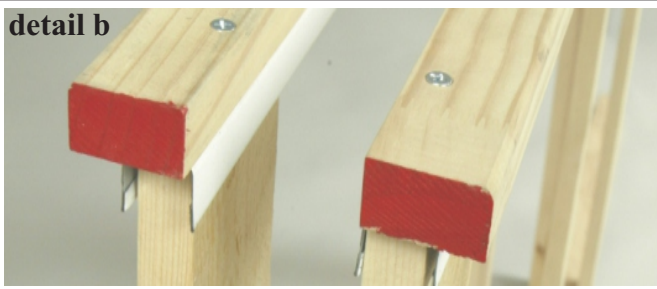

NOTE: Make split jamb ends are even at the ribs

- b) Repeat using remaining split jamb and stiffener, insert final 3 ribs into stiffener.



4

- Install steel floor saddle at bottom of pocket at low end of ribs (as pictured) positioned approximately three inches from split jambs.



NOTE: Make sure inside ribs are 2 inches apart

5

- Install header plate at top of pocket frame making sure that split end jambs and stiffeners are together and insert into center of header plate. Pocket frame is complete and ready for installation.

Note: The door track faces down with the backbone at the track end.



Henry
Pocket Frames
Made in the USA

6995 Central Ave
Newark, CA 94560
(510) 797-1118

INSTALLATION GUIDE


①

The box contains:

1 steel floor saddle, 6 wood dowels and 12 wood screws

7 horizontal pieces: Wood header plate(c/w door track) and 6 ribs(slats)

4 color coded vertical pieces:
1 Backbone (spine) 2 split jamb, steel stiffener and (1) 4 9/16" door jamb (green ends up, red ends down)

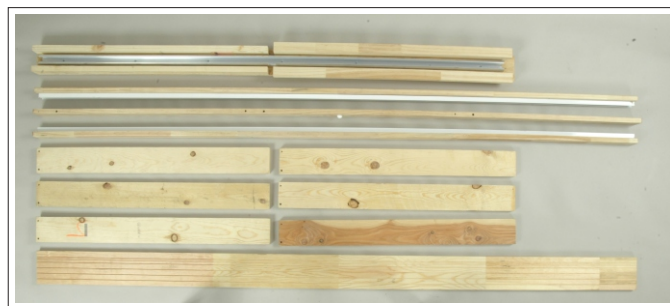

Assembly is quick and easy using ordinary tools:

②

a) **Starting** with the backbone (a) (green end up) insert 3 dowels in the side edge (see detail a)

b) attach 3 ribs to the dowels securing them with 1 screw per rib per dowel

c) Repeat (b) at the other edge or side of the backbone.

